




 



 






















 



 




 


 



 
 
 

 



 
 



 

 

 






Originale		Sostituto		Originale		Sostituto	
	Power		Power		Yellow		Yellow
	Play		Play		Blue		Blue
	Pause		Pause		CH+		Ch +
	<<		<<		CH-		Ch -
	>>		>>		Source		AV
	I<<		I<<		Vol+		Vol +
	>>I		>>I		Vol-		Vol -
	Stop		Stop		Menu		Menu
	TV/TXT		Text		Rec		Rec
	Cancel		Eject		Up		Up
	Reveal		D. Menu		Down		Down
	Hold		Media		Right		Right
	Size		3D		Left		Left
	Subpage		Shift + Subt		OK		Ok
	Index		List		DVB		Smart
	Red		Red		Exit		Exit
	Green		Green		1		1





Originale	Sostituto
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
-/--	SHIFT + -/-- Guide
Recall	RETURN BACK
PICTURE	SHIFT + PICTURE FORMAT
SOUND	SHIFT + SOUND DUAL
NICAM/A2	SETTINGS OPT
MUTE	MUTE
SLEEP	PROG SLEEP
TV/RADIO	SEARCH TV/R

Originale	Sostituto
FAV	FAV
FAV+	FAV+
FAV-	FAV-
SUBTITLE	Subt
PIC FORMAT	Format
TEXT	Shift + Text
DISPLAY	Info
LANGUAGE	Dual
EPG	Guide

