 


 
 
 

 

 
 

 
 
 
 

 


 
 
 

 
 
 

 
 
 

 






Originale		Sostituto		Originale		Sostituto	
	Power		Power		Q.View		D. Menu
	Subtitle		Subt		Vol+		Vol +
	APP/*		Shift + Media		Vol-		Vol -
	[]/Ratio		3D		Mute		Mute
	Input		AV		FAV		Pre Ch
	Tv/Rad		TV/R		Guide		Guide
	1		1		P+		Ch +
	2		2		P-		Ch -
	3		3		Info		Info
	4		4		Smart		Smart
	5		5		My APPS		Media
	6		6		Back		Back
	7		7		Settings		Options
	8		8		Exit		Exit
	9		9		Up		Up
	0		0		Down		Down
	List		List		Right		Right





Originale		Sostituto		Originale		Sostituto	
	Left		Left				
	OK		Ok				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	Text		Text				
	T.OPT	 + 	Shift + Options				
	Q.Menu		Menu				
	Sleep		Sleep				
	AD		Dual				
	Stop		Stop				
	Play		Play				
	Pause		Pause				
	<<		<<				
	>>		>>				
	Rec / *		Rec				

