


 

 

 

 



 










Originale	Sostituto
 Open/Close	 Eject / Surround
 On/Standby	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 +10	 Guide / EPG / -/--
 0	 0
 T/Search	 Red / Netflix / Search
 EPM	 Picture / Format
 EAM	 Sound / Title
 Mute	 Mute / Dimmer

Originale	Sostituto
 II>/Pause/Step	 Pause / Step / Freeze
 Camera/Angle	 Info / Angle
 [...] / Subtitle / MP / C onv	 Subtitle / EQ
 O)) / Audio	 Audio / Lang I/II
 I>/Slow	 Shift + Play /
 Play	 Play / Slow
 Stop	 Stop / Hold
 I<< Skip	 I<< / Preset-
 <</REV	 << / Tune-
 >>/FWD	 >> / Tune+
 Skip >>I	 >>I / Preset+
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Top Menu	 D.Menu / Top
 Down	 Down





Originale	Sostituto
 Menu	 Menu / Home
 Clear	 Exit / Cancel / Clear
 Display	 Display / Media
 Navi	 Smart / List
 Return	 Back / Return
 Memory	 Rec / Rec Mode
 Play Mode	 Blue / Prime Video / Random
 A-B RPT	 Yellow / YouTube / Repeat
 PBC	 Fav / Marker / PC
 Setup	 Setup / OPT /
 Video Out	 AV / Input / RDS
 HDMI	 Shift + 0
 Zoom	 Zoom / Size
 DVD	 Shift + 2
 USB	 Shift + 8

Originale	Sostituto

