







 

 
 
 
 
 

 
 
 

 













 
 

 
 
 










Originale	Sostituto
 Standby/On	 Power
 VCR Eject	 Shift + Eject
 DVD/VCR	 Red
 DVD	 Eject
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Timer Rec	 Guide
 Input Select	 AV
 Show View	 3D

Originale	Sostituto
 Return	 Back
 Cancel	 Exit
 Title Menu/Top	 Menu
 DVD Menu	 D. Menu
 Setup	 Options
 CH+	 Ch +
 CH-	 Ch -
 Up	 Up
 Down	 Down
 Right/TRK+	 Right
 Left/TRK-	 Left
 Enter	 Ok
 Stop	 Stop
 Play	 Play
 Pause/Still	 Pause
 I<</Skip/Index-	 I<<
 <</Rew/Search	 <<





Originale	Sostituto	Originale	Sostituto
 >>/F.FWD/Search	 >>	 Tv/Video	 TV/R
 >>I/Skip/Index	 >>I	 Progressive	 List
 One Touch	 Text		
 CM Skip	 Yellow		
 I> Slow	 Blue		
 Rec	 Rec		
 Rec Mode	 Shift + Rec		
 Dubbing	 Format		
 Audio/Audio	 Dual		
 Display	 Info		
 Zoom	 Shift + 3D		
 Repeat A-B	 Shift + Text		
 Zero Return	 Shift + Back		
 Counter	 Smart		
 Subtitle/ATR	 Subt		
 Play Mode/Repeat	 Shift + Play		
 Clock/Counter	 Shift + Dual		

Originale	Sostituto
 Tv/Video	 TV/R
 Progressive	 List

