








 



 
 






 









Originale	Sostituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Red/M	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Up	 Up
 Down	 Down

Originale	Sostituto
 Right	 Right
 Left	 Left
 OK	 Ok
 PR+	 Ch +
 PR-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Menu	 Menu
 TV	 TV/R
 Video	 AV
 L/?	 Guide
 L/?	 Dual
 PC	 Pre Ch
 Text	 Text
 F[+]	 3D
 Hold/Freeze	 Format
 M/S	 Options





Originale	Sostituto	Originale	Sostituto
	Mute		Mute
	PIP		Media
	Auto/Page		Smart
	i		Info
	Timer/Mix		Subt
	F1		Shift + 1
	F2		Shift + 2
	F3		Shift + 3
	F4		Shift + 4

Originale	Sostituto

