









































































































































Originale	Sostituto	Originale	Sostituto
 Power	 Power	 CH+	 CH+ / Page+
 Red	 Red / Netflix / Search	 CH-	 CH- / Page-
 Green	 Green / APP / Repeat	 Up	 Up
 Yellow	 Yellow / YouTube / Repeat	 Down	 Down
 Blue	 Blue / Prime Video / Random	 Right	 Right
 TV/SAT	 AV / Input / RDS	 Left	 Left
 TV/Radio	 TV/Radio /	 OK	 OK
 Zoom	 Zoom / Size	 Vol+	 Vol+
 List	 Smart / List	 Vol-	 Vol-
 Audio	 Audio / Lang I/II	 Recall	 Back / Return
 EPG	 Guide / EPG / -/--	 P+	 >> / Preset+
 Timer	 Sleep / Timer	 P-	 << / Preset-
 Text	 Text / Goto	 FAV	 Fav / Marker / PC
 Exit	 Exit / Cancel / Clear	 1	 1
 Menu	 Menu / Home	 2	 2
 M/P	 Display / Media	 3	 3
 Mute	 Mute / Dimmer	 4	 4

Originale	Sostituto	Originale	Sostituto
 Power	 DIMMER MUTE	 TV	 AUX
 TV/SAT	 SHIFT	 DVD	 REC MODE
 TV/RADIO	 SLOW	 STEP-FREEZE	 HOLD
 ZOOM	 TUNE-	 TUNE+	 PRESET-
 LIST	 PRESET+	 TITLE	 LANG I/II
 TV/SAT	 EQ	 SURROUND	 SOUND
 TV/Radio	 AUDIO	 SUBTITLE	 PROGRAM
 ZOOM	 SIZE	 TIMER	 PICTURE
 LIST	 SLEEP	 RDS	 ZOOM
 AUDIO	 TOP MENU	 OPT-TOOLS	 GOTO
 EPG	 D.MENU	 SETUP	 TEXT
 TIMER	 HOME	 ANGLE	 INFO
 Text	 MENU	 OK	 RETURN
 Exit	 CLEAR	 EXIT	 BACK
 Menu	 CANCEL	 VOL+	 CH PAGE
 M/P	 LIST	 VOL-	 TV
 Mute	 SMART	MEDIA	DVD
	DISPLAY	CH PAGE	CD-STB
	TV	PRESET+	1
	SMART	PRESET-	2
	MEDIA	1	3
	DISPLAY	2	4
	TV	3	
	DVD	4	
	CD-STB		
	1		
	2		
	3		
	4		







 















 














































Originale	Sostituto
Power	Power
SAT	Smart / List
Info	Info / Angle
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0 / Zoom	Zoom / Size
0 / Zoom	0
Audio	Audio / Lang I/II
Mute	Mute / Dimmer
Recall	Back / Return

Originale	Sostituto
FAV	Fav / Marker / PC
Up / CH+	CH+ / Page+
Down / CH-	Down
Up / CH+	Up
Right / Vol+	Right
Right / Vol+	Vol+
Down / CH-	CH- / Page-
Left / Vol-	Vol-
Left / Vol-	Left
OK	OK
Menu	Menu / Home
Exit	Exit / Cancel / Clear
Blue / Pause	Blue / Prime Video / Random
Blue / Pause	Pause / Step / Freeze
Red / Text	Red / Netflix / Search
Red / Text	Text / Goto
Multivideo	Display / Media














 



















Originale	Sostituto	Originale	Sostituto
Mute	 Mute / Dimmer	Menu Down	 Down
PWR On/Off	 Power	Back	 Back / Return
App	 +  Shift + Green / APP /	Volume+	 Vol+
Epg	 Guide / EPG / -/--	CH/Page+	 CH+ / Page+
Info	 Info / Angle	Volume-	 Vol-
Subt.List	 Subtitle / EQ	CH/Page-	 CH- / Page-
TV	 TV/Radio /	Audio	 Audio / Lang I/II
Text	 Text / Goto	1. ?	 1
Zoom	 Zoom / Size	2abc	 2
Menu	 Menu / Home	3def	 3
TV/SAT	 AV / Input / RDS	4ghi	 4
Menu Up	 Up	5jkl	 5
Display	 Display / Media	6mno	 6
Menu Left	 Left	7pqrm	 7
OK Enter	 OK	8tuv	 8
Menu Right	 Right	9wxyz	 9
Exit	 Exit / Cancel / Clear	Guide Pilote	 +  Shift + Guide / EPG / -/--

Originale	Sostituto	Originale	Sostituto
Mute	 Mute / Dimmer	Menu Down	 Down
PWR On/Off	 Power	Back	 Back / Return
App	 +  Shift + Green / APP /	Volume+	 Vol+
Epg	 Guide / EPG / -/--	CH/Page+	 CH+ / Page+
Info	 Info / Angle	Volume-	 Vol-
Subt.List	 Subtitle / EQ	CH/Page-	 CH- / Page-
TV	 TV/Radio /	Audio	 Audio / Lang I/II
Text	 Text / Goto	1. ?	 1
Zoom	 Zoom / Size	2abc	 2
Menu	 Menu / Home	3def	 3
TV/SAT	 AV / Input / RDS	4ghi	 4
Menu Up	 Up	5jkl	 5
Display	 Display / Media	6mno	 6
Menu Left	 Left	7pqrm	 7
OK Enter	 OK	8tuv	 8
Menu Right	 Right	9wxyz	 9
Exit	 Exit / Cancel / Clear	Guide Pilote	 +  Shift + Guide / EPG / -/--





Originale	Sostituto	Originale	Sostituto
Power		Power	Power
Mute		Mute / Dimmer	Mute / Dimmer
Pause		Pause / Step / Freeze	Pause / Step / Freeze
Audio		Audio / Lang I/II	Audio / Lang I/II
Zoom		Zoom / Size	Zoom / Size
Timer		Sleep / Timer	Sleep / Timer
Tv/Radio		TV/Radio /	TV/Radio /
Text		Text / Goto	Text / Goto
Tv/SAT		AV / Input / RDS	AV / Input / RDS
Menu		Menu / Home	Menu / Home
Up/CH+		Up	Up
Info		Info / Angle	Info / Angle
Left		Left	Left
OK		OK	OK
Right		Right	Right
Exit		Exit / Cancel / Clear	Exit / Cancel / Clear
Down/CH-		Down	Down

Originale	Sostituto	Originale	Sostituto
Recall		Back / Return	Back / Return
Vol+		Vol+	Vol+
List		Smart / List	Smart / List
P+		CH+ / Page+	CH+ / Page+
Vol-		Vol-	Vol-
M/P		Display / Media	Display / Media
P-		CH- / Page-	CH- / Page-
1		1	1
2		2	2
3		3	3
4		4	4
5		5	5
6		6	6
7		7	7
8		8	8
9		9	9
EPG		Guide / EPG / -/-	Guide / EPG / -/-



