














 





















































































Originale	Sostituto	Originale	Sostituto
 Power	 Power	 CH+	 CH+ / Page+
 Red	 Red / Netflix / Search	 CH-	 CH- / Page-
 Green	 Green / APP / Repeat	 Up	 Up
 Yellow	 Yellow / YouTube / Repeat	 Down	 Down
 Blue	 Blue / Prime Video / Random	 Right	 Right
 TV/SAT	 AV / Input / RDS	 Left	 Left
 TV/Radio	 TV/Radio /	 OK	 OK
 Zoom	 Zoom / Size	 Vol+	 Vol+
 List	 Smart / List	 Vol-	 Vol-
 Audio	 Audio / Lang I/II	 Recall	 Back / Return
 EPG	 Guide / EPG / -/--	 P+	 >> / Preset+
 Timer	 Sleep / Timer	 P-	 << / Preset-
 Text	 Text / Goto	 FAV	 Fav / Marker / PC
 Exit	 Exit / Cancel / Clear	 1	 1
 Menu	 Menu / Home	 2	 2
 M/P	 Display / Media	 3	 3
 Mute	 Mute / Dimmer	 4	 4

Originale	Sostituto	Originale	Sostituto
 CH+	 CH+ / Page+	 CH-	 CH- / Page-
 Up	 Up	 Down	 Down
 Right	 Right	 Left	 Left
 OK	 OK	 Vol+	 Vol+
 Vol-	 Vol-	 Recall	 Back / Return
 P+	 >> / Preset+	 P-	 << / Preset-
 FAV	 Fav / Marker / PC	 1	 1
 2	 2	 3	 3
 3	 3	 4	 4








 
















 
















 



















 



 






Originale	Sostituto
 Power	 Power
 SAT	 Smart / List
 Info	 Info / Angle
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0 / Zoom	 Zoom / Size
 0 / Zoom	 0
 Audio	 Audio / Lang I/II
 Mute	 Mute / Dimmer
 Recall	 Back / Return

Originale	Sostituto
 FAV	 Fav / Marker / PC
 Up / CH+	 CH+ / Page+
 Down / CH-	 Down
 Up / CH+	 Up
 Right / Vol+	 Right
 Right / Vol+	 Vol+
 Down / CH-	 CH- / Page-
 Left / Vol-	 Vol-
 Left / Vol-	 Left
 OK	 OK
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 Blue / Pause	 Blue / Prime Video / Random
 Blue / Pause	 Pause / Step / Freeze
 Red / Text	 Red / Netflix / Search
 Red / Text	 Text / Goto
 Multivideo	 Display / Media



























Originale	Sostituto	Originale	Sostituto
Mute	 Mute / Dimmer	Menu Down	 Down
PWR On/Off	 Power	Back	 Back / Return
App	 +  Shift + Green / APP /	Volume+	 Vol+
Epg	 Guide / EPG / -/--	CH/Page+	 CH+ / Page+
Info	 Info / Angle	Volume-	 Vol-
Subt.List	 Subtitle / EQ	CH/Page-	 CH- / Page-
TV	 TV/Radio /	Audio	 Audio / Lang I/II
Text	 Text / Goto	1. ?	 1
Zoom	 Zoom / Size	2abc	 2
Menu	 Menu / Home	3def	 3
TV/SAT	 AV / Input / RDS	4ghi	 4
Menu Up	 Up	5jkl	 5
Display	 Display / Media	6mno	 6
Menu Left	 Left	7pqrm	 7
OK Enter	 OK	8tuv	 8
Menu Right	 Right	9wxyz	 9
Exit	 Exit / Cancel / Clear	Guide Pilote	 +  Shift + Guide / EPG / -/--

Originale	Sostituto	Originale	Sostituto
Mute	 Mute / Dimmer	Menu Down	 Down
PWR On/Off	 Power	Back	 Back / Return
App	 +  Shift + Green / APP /	Volume+	 Vol+
Epg	 Guide / EPG / -/--	CH/Page+	 CH+ / Page+
Info	 Info / Angle	Volume-	 Vol-
Subt.List	 Subtitle / EQ	CH/Page-	 CH- / Page-
TV	 TV/Radio /	Audio	 Audio / Lang I/II
Text	 Text / Goto	1. ?	 1
Zoom	 Zoom / Size	2abc	 2
Menu	 Menu / Home	3def	 3
TV/SAT	 AV / Input / RDS	4ghi	 4
Menu Up	 Up	5jkl	 5
Display	 Display / Media	6mno	 6
Menu Left	 Left	7pqrm	 7
OK Enter	 OK	8tuv	 8
Menu Right	 Right	9wxyz	 9
Exit	 Exit / Cancel / Clear	Guide Pilote	 +  Shift + Guide / EPG / -/--





Originale	Sostituto	Originale	Sostituto
Power		Power	
Mute		Mute / Dimmer	
Pause		Pause / Step / Freeze	
Audio		Audio / Lang I/II	
Zoom		Zoom / Size	
Timer		Sleep / Timer	
Tv/Radio		TV/Radio /	
Text		Text / Goto	
Tv/SAT		AV / Input / RDS	
Menu		Menu / Home	
Up/CH+		Up	
Info		Info / Angle	
Left		Left	
OK		OK	
Right		Right	
Exit		Exit / Cancel / Clear	
Down/CH-		Down	

Originale	Sostituto	Originale	Sostituto
Recall		Back / Return	
Vol+		Vol+	
List		Smart / List	
P+		CH+ / Page+	
Vol-		Vol-	
M/P		Display / Media	
P-		CH- / Page-	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	
8		8	
9		9	
EPG		Guide / EPG / -/-	



