
 










 









Originale		Sostituto		Originale		Sostituto	
	Power		Power		Rec		Rec / Rec Mode
	Mute		Mute / Dimmer		PVR List		Smart / List
	Red		Red / Netflix / Search		Menu		Menu / Home
	Green		Green / APP / Repeat		Exit		Exit / Cancel / Clear
	Yellow		Yellow / YouTube / Repeat		Up		Up
	Blue/Timer		Blue / Prime Video / Random		Left		Left
	Format		Picture / Format		OK		OK
	Res.		D.Menu / Top		Right		Right
	TTX		Text / Goto		Down		Down
	S-T		Setup / OPT /		EPG		Guide / EPG / -/-
	I<<		I<< / Preset-		Info		Info / Angle
	>>I		>>I / Preset+		CH+		CH+ / Page+
	<<		<< / Tune-		Tv/Rad		TV/Radio /
	>>		>> / Tune+		Vol+		Vol+
	Pause		Pause / Step / Freeze		CH-		CH- / Page-
	Play		Play / Slow		Audio		Audio / Lang I/II
	Stop		Stop / Hold		Vol-		Vol-



