








 
 

 




 

 

 






 


 






Originale	Sostituto
 Standby	 Power
 Mute	 Mute
 ATV	 Smart
 Tv/Radio	 TV/R
 Tv Guide	 Guide
 USB	 Media
 Rec	 Rec
 I<<	 I<<
 >>I	 >>I
 Stop	 Stop
 <<	 <<
 >>	 >>
 Play	 Play
 Pause	 Pause
 Rec List	 List
 AV/Source	 AV
 i/Info	 Info

Originale	Sostituto
 Menu	 Menu
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0





Originale	Sostituto
	RETURN BACK Back
	FAV PRE-CH Pre Ch
	+ VOL Vol +
	VOL - Vol -
	AD SUBT Subt
	ECO 3D 3D
	SOUND DUAL Dual
	PROG SLEEP Sleep
	+ CH Ch +
	CH - Ch -
	A Red
	B Green
	C Yellow
	D Blue
	REPEAT TEXT Text
	SETTINGS OPT Options
	E-MANUAL D.MENU D. Menu

Originale	Sostituto
	SHIFT + Shift + Power
	SHIFT + Shift + Format
	Format
	SHIFT + Shift + Dual
	ZOOM Eject

