


 






 








 




Originale	Sostituto
 Power	 Power
 Eject/Open-Close	 Eject
 DVD	 Blue
 VCR	 Yellow
 AV/INPUT	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 I.Skip	 Guide
 Dubbing	 Media

Originale	Sostituto
 <</Backward	 <<
 >>/Forward	 >>
 I<< Skip	 I<<
 Skip >>I	 >>I
 Pause/Step	 Pause
 Play	 Play
 Stop	 Stop
 Disc Menu/List	 Menu
 Home	 Smart
 Display	 Info
 Return	 Back
 PR/CH(TRK)+	 Ch +
 PR/CH(TRK)-	 Ch -
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left





Originale		Sostituto	
	Enter		Ok
	O))/Audio		Dual
	[...]/Subtitle		Subt
	Zoom	+	Shift + Eject
	CHP.ADD		Text
	Rec		Rec
	Rec Mode	+	Shift + Rec
	Title		3D
	Thumbnail		Green
	Play Mode	+	Shift + Play
	Marker		Options
	Search	+	Shift + TV/R
	Clear		Exit
	Tv/VCR		TV/R
	*		Mute
	Power Tv	+	Shift + Power
	AV/Input Tv	+	Shift + AV

Originale		Sostituto	
	PR/CH- Tv	+	Shift + Ch -
	PR/CH+ Tv	+	Shift + Ch +
	Vol+ Tv		Vol +
	Vol- Tv		Vol -

