



Originale	Sostituto
	 Mute / Dimmer
	 Fav / Marker / PC
	 Power
	 Info / Angle
	 Smart / List
	 1
	 2
	 3
	 Stop / Hold
	 4
	 5
	 6
	 Subtitle / EQ
	 7
	 8
	 9
	 Display / Media










 






Originale	Sostituto
	 AV / Input / RDS
	 0
	 Guide / EPG / -/--
	 Shift + Text /
	 Text / Goto
	 CH+ / Page+
	 Up
	 Menu / Home
	 Left
	 Vol-
	 OK
	 Right
	 Vol+
	 Back / Return
	 CH- / Page-
	 Down
	 Setup / OPT /





**Originale**

**Sostituto**

	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow / Timer		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Violet		Shift + Red / Netflix /
	Picture		Picture / Format
	♫		Sound / Title
	PP		Exit / Cancel / Clear

**Originale**

**Sostituto**