



 

 

 

 



 

 




















 


 

 














 












Originale	Sostituto
 AV	 AV / Input / RDS
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 P+	 CH+ / Page+
 0	 0
 V+	 Vol+
 P-	 CH- / Page-
 V-	 Vol-

Originale	Sostituto
 Up/CH+	 Up
 Left/Vol-	 Shift + Left
 ←	 Left
 OK	 OK
 Right/Vol+	 Right
 Down/CH-	 Down
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 Info	 Info / Angle
 EPG	 Guide / EPG / -/-
 FAV	 Fav / Marker / PC
 TXT	 Text / Goto
 S-T	 D.Menu / Top
 Tv/R	 TV/Radio /
 Timer	 Sleep / Timer
 Edit	 Setup / OPT /
 Del	 Shift + Exit / Cancel / Clear





Originale		Sostituto		Originale		Sostituto	
	Audio		Audio / Lang I/II				
	Red		Red / Netflix / Search				
	Green		Green / APP / Repeat				
	Yellow		Yellow / YouTube / Repeat				
	Blue		Blue / Prime Video / Random				

