 










Originale	Sostituto
 Power	 Power
 Input	 AV
 TV/TXT	 Text
 Cancel	 Media
 Reveal	 D. Menu
 Nicam/A2	 Dual
 Size	 Format
 Hold	 Eject
 Index	 TV/R
 Subpage	 Options
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 CH+	 Ch +
 CH-	 Ch -
 Mute	 Mute

Originale	Sostituto
 Menu	 Menu
 Exit	 Exit
 Vol+	 Vol +
 Vol-	 Vol -
 Channel List	 Smart
 EPG	 Guide
 Info	 Info
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5





Originale	Sostituto
6	6
7	7
8	8
9	9
0	0
FAV	Pre Ch
Recall	Back
Picture	Shift + Format
Sound	Shift + Dual
Sleep	Sleep
Subtitle	Subt
Rec	Rec
Aspect	3D
<<	<<
>>	>>
<<	<<
>>	>>

Originale	Sostituto
Play	Play
Pause	Pause
Stop	Stop
List	List
Repeat	Shift + Text

