



Originale	Sostituto
Power	Power
Mute	Mute / Dimmer
Nicam/A2	Shift + Audio / Lang I/II
Sleep	Sleep / Timer
Aspect	Shift + Picture / Format
Media	Shift + Display / Media
Display	Display / Media
Auto	Smart / List
P.Mode	Picture / Format
S.Mode	Sound / Title
DTV	D.Menu / Top
Source	AV / Input / RDS
Up	Up
Left	Left
Enter	OK
Right	Right
Down	Down

Originale	Sostituto
Menu	Menu / Home
Exit	Exit / Cancel / Clear
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
-/--	Shift + Guide / EPG / -/--
Recall	Back / Return
CH+	CH+ / Page+
Info	Info / Angle
Audio	Audio / Lang I/II





Originale	Sostituto
 Vol+	 Vol+
 CH-	 CH- / Page-
 FAV	 Fav / Marker / PC
 Tv/Radio	 TV/Radio /
 Vol-	 Vol-
 Text	 Text / Goto
 EPG	 Guide / EPG / -/-
 Subtitle	 Subtitle / EQ
 Index	 Setup / OPT /
 <</Hold	 << / Tune-
 <</Hold	 Shift + Stop /
 Size	 Zoom / Size
 >>	 >> / Tune+
 I<</Reveal	 I<< / Preset-
 >>I/Subpage	 >>I / Preset+
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze

Originale	Sostituto
 Stop	 Stop / Hold
 Rec/Repeat	 Rec / Rec Mode
 Rec/Repeat	 Shift + Green / APP /
 T-Shift	 Eject / Surround
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Cyan	 Blue / Prime Video / Random

