
 
 


 
 









 









 





 











Originale	Sostituto
 Input/Tuner	 AV / Input / RDS
 Power	 Power
 Open/Close	 Eject / Surround
 iPod	 Shift + 8
 PIP	 Zoom / Size
 Display	 Display / Media
 Home	 Menu / Home
 Disc Menu	 D.Menu / Top
 Up/Presets+	 Up
 Left/Tuner-	 Left
 Enter	 OK
 Right/Tuner+	 Right
 Down/Presets-	 Down
 Return	 Back / Return
 Title/PopUp	 Shift + Sound / Title
 Stop	 Stop / Hold
 Play	 Play / Slow

Originale	Sostituto
 Pause/step	 Pause / Step / Freeze
 I<< Skip	 I<< / Preset-
 << Scan	 << / Tune-
 Scan >>	 >> / Tune+
 Skip >>I	 >>I / Preset+
 SKP Level	 Setup / OPT /
 Vol+	 Vol+
 Sound	 Sound / Title
 Mute	 Mute / Dimmer
 Vol-	 Vol-
 Night	 TV/Radio /
 1	 1
 2	 2
 3	 3
 Marker	 Fav / Marker / PC
 4	 4
 5	 5





Originale		Sostituto	
6	6	TUNER 6	6
SEARCH	Search	SHIFT + NETFLIX	Shift + Red / Netflix /
7	7	AUX - HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
REPEAT	Repeat	SHIFT + APP	Shift + Green / APP /
SUBTITLE	[...]/Subtitle	EQ SUBTITLE	Subtitle / EQ
0	0	HDMI - BAT 0	0
RESOLUTION	Resolution	FORMAT PICTURE	Picture / Format
CLEAR	Clear	CLEAR EXIT	Exit / Cancel / Clear
RDS	Red/RDS	NETFLIX SEARCH	Red / Netflix / Search
PTY	Green/PTY	APP REPEAT	Green / APP / Repeat
PTY SEARCH	Yellow/PTY Search	YouTube REPEAT A-B	Yellow / YouTube / Repeat
MO./ST.	Blue/Mo./St.	Prime Video RANDOM	Blue / Prime Video / Random
POWER	Power Tv	SHIFT + POWER	Shift + Power
PR/CH	PR/CH+ Tv	+ CH PAGE	CH+ / Page+
+ VOL	Vol+ Tv	SHIFT + + VOL	Shift + Vol+

Originale		Sostituto	
INPUT	Input Tv	SHIFT + RDS AV INPUT	Shift + AV / Input / RDS
PR/CH -	PR/CH- Tv	CH PAGE -	CH- / Page-
VOL -	Vol- Tv	SHIFT + VOL -	Shift + Vol-
SLEEP	Sleep	TIMER SLEEP	Sleep / Timer

