 

 

 

 



 

 



 



 





 



 

 





 

 

 












 


 

 

 


 






Originale		Sostituto		Originale		Sostituto	
	Standby		Power		Right		Right
	Rec PVR		Rec / Rec Mode		Vol+		Vol+
	List PVR		Smart / List		Favourite		Fav / Marker / PC
	Mute		Mute / Dimmer		CH-		CH- / Page-
	EPG		Guide / EPG / -/-		Down		Down
	Info		Info / Angle		Tv/Radio		TV/Radio /
	TTX		Text / Goto		1		1
	Audio		Audio / Lang I/II		2		2
	DTV/VCR		AV / Input / RDS		3		3
	Subtitle		Subtitle / EQ		Recall		Back / Return
	Menu		Menu / Home		4		4
	CH+		CH+ / Page+		5		5
	Up		Up		6		6
	Exit		Exit / Cancel / Clear		Goto		Shift + Text /
	Left		Left		7		7
	Vol-		Vol-		8		8
	OK		OK		9		9





Originale		Sostituto		Originale		Sostituto	
	Standby		Power		Right		Right
	Rec PVR		Rec / Rec Mode		Vol+		Vol+
	List PVR		Smart / List		Favourite		Fav / Marker / PC
	Mute		Mute / Dimmer		CH-		CH- / Page-
	EPG		Guide / EPG / -/-		Down		Down
	Info		Info / Angle		Tv/Radio		TV/Radio /
	TTX		Text / Goto		1		1
	Audio		Audio / Lang I/II		2		2
	DTV/VCR		AV / Input / RDS		3		3
	Subtitle		Subtitle / EQ		Recall		Back / Return
	Menu		Menu / Home		4		4
	CH+		CH+ / Page+		5		5
	Up		Up		6		6
	Exit		Exit / Cancel / Clear		Goto		Shift + Text /
	Left		Left		7		7
	Vol-		Vol-		8		8
	OK		OK		9		9



