






 

 


 





 





 























 

 
 
 



 



 



 







Originale		Sostituto		Originale		Sostituto	
	Mute		Mute / Dimmer		9		9
	Up		Up		PP		Back / Return
	Power		Power		0		0
	Left		Left		-/--/Exit		Exit / Cancel / Clear
	Menu		Menu / Home		P+		CH+ / Page+
	Right		Right		Vol-		Vol-
	OK/Select		OK		Vol+		Vol+
	Down		Down		P-		CH- / Page-
	[i]/Info		Info / Angle		Swap/P<P		Fav / Marker / PC
	1		1		I-II		Audio / Lang I/II
	2		2		Tv/DTV		TV/Radio /
	3		3		AV/Source		AV / Input / RDS
	4		4		Red/↑		Red / Netflix / Search
	5		5		Green/↓		Green / APP / Repeat
	6		6		Yellow		Yellow / YouTube / Repeat
	7		7		Blue		Blue / Prime Video / Random
	8		8		[≡]/Text		Text / Goto





Originale		Sostituto		Originale		Sostituto	
	[≡o]		Sleep / Timer				
	[≡+]/[+]		Sound / Title				
	[≡x]/[■□]		Eject / Surround				
	[.≡]		Picture / Format				
	[≡♦]/[+]/Wide		Zoom / Size				
	[≡?]		Subtitle / EQ				
	[≡i]/Guide		Guide / EPG / -/--				

