



 

 

 
 


 
 

 
 


 
 
 


 



 
 

 
 
 

 
 



 

 
 
 
 
 
 

 
 
 
 


 
 

 




 




Originale		Sostituto		Originale		Sostituto	
	Standby		Power		Zoom/Aspect		3D
	Mute		Mute		CH+		Ch +
	1		1		CH-		Ch -
	2		2		Menu		Menu
	3		3		Exit		Exit
	4		4		Sleep		Sleep
	5		5		Source		AV
	6		6		Up		Up
	7		7		Down		Down
	8		8		Right		Right
	9		9		Left		Left
	0/10		0		OK/Enter		Ok
	Recall/Program		Back		Red		Red
	List/+10		List		Green/R.List		Green
	Vol+		Vol +		Yellow/TList/Title		Yellow
	Vol-		Vol -		Blue/D.Display		Blue
	Info/Display		Info		D.Setup		Smart





Originale		Sostituto	
	D.Menu		D. Menu
	TTX		Text
	Open/Close		Eject
	A-B/Index		Options
	Goto/Hold		Media
	I/II/Audio		Dual
	Rec/Repeat		Rec
	Stop/Reveal		Stop
	Play		Play
	Pause		Pause
	Size		Format
	Subtitle		Subt
	<</Subpage		<<
	>>		>>
	Tv/Radio		TV/R
	I<<		I<<
	>>I		>>I

Originale		Sostituto	
	EPG		Guide
	FAV		Pre Ch

