 









 

 

 
 


 



 



 
 



 


 

 




 
 

 

 
 
 

 



 

 


 


 









Originale		Sostituto		Originale		Sostituto	
	Standby		Power		Down		Down
	Rec PVR		Rec		Right		Right
	List PVR		Smart		Left		Left
	Mute		Mute		OK		Ok
	EPG		Guide		Vol+		Vol +
	Audio		Dual		Vol-		Vol -
	Info		Info		1		1
	DTV/VCR		Media		2		2
	TTX		Text		3		3
	Subtitle		Subt		4		4
	Menu		Menu		5		5
	Exit		Exit		6		6
	Favourite		Pre Ch		7		7
	Tv/Radio		TV/R		8		8
	CH+		Ch +		9		9
	CH-		Ch -		0		0
	Up		Up		Recall		Back




 
 

 

 





 
 


 


 




 



 
 
 









 









 

 








 



 




Originale	Sostituto	Originale	Sostituto
GOTO	AV		
<<	<<		
>>	>>		
<<	<<		
>>	>>		
Play	Play		
Pause	Pause		
Stop	Stop		
Repeat	SHIFT + REPEAT TEXT Shift + Text		
Red	A		
Green	B		
Yellow	C		
Blue	D		





Originale		Sostituto		Originale		Sostituto	
	Standby		Power		Down		Down
	Rec PVR		Rec		Right		Right
	List PVR		List		Left		Left
	Mute		Mute		OK		Ok
	EPG		Guide		Vol+		Vol +
	Audio		Dual		Vol-		Vol -
	Info		Info		1		1
	DTV/VCR		Media		2		2
	TTX		Text		3		3
	Subtitle		Subt		4		4
	Menu		Menu		5		5
	Exit		Exit		6		6
	Favourite		Pre Ch		7		7
	Tv/Radio		TV/R		8		8
	CH+		Ch +		9		9
	CH-		Ch -		0		0
	Up		Up		Recall		Back





Originale		Sostituto		Originale		Sostituto	
	Goto		Options				
	<<		<<				
	>>		>>				
	<<		<<				
	>>		>>				
	Play		Play				
	Pause		Pause				
	Stop		Stop				
	Repeat	 + 	Shift + Text				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				

