

 












 










 






 


















Originale	Sostituto
 Standby	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Recall	 Back / Return
 0	 0
 List	 Smart / List
 Vol+	 Vol+
 Info/Display	 Display / Media
 Info/Display	 Info / Angle

Originale	Sostituto
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Zoom/Aspect	 Shift + Zoom /
 Zoom/Aspect	 Picture / Format
 CH-	 CH- / Page-
 Menu	 Menu / Home
 Up	 Up
 Exit	 Exit / Cancel / Clear
 Left	 Left
 OK/Enter	 OK
 Right	 Right
 Sleep	 Sleep / Timer
 Down	 Down
 Source	 AV / Input / RDS
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat





Originale	Sostituto
 Blue	 Blue / Prime Video / Random
 TTX	 Text / Goto
 Index	 D.Menu / Top
 Hold	 Shift + Stop /
 I/II/Audio	 Audio / Lang I/II
 Repeat/Rec	 Rec / Rec Mode
 Repeat/Rec	 Shift + Green / APP /
 Stop/Reveal	 Stop / Hold
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Size	 Zoom / Size
 Subtitle	 Subtitle / EQ
 <</Subpage	 << / Tune-
 >>	 >> / Tune+
 Tv/Radio	 TV/Radio /
 I<<	 I<< / Preset-
 EPG	 Guide / EPG / -/--

Originale	Sostituto
 >>I	 >>I / Preset+
 FAV	 Fav / Marker / PC

