



Originale	Sostituto
 Power	 Power
 TV Standby	 Shift + Power
 TV Input	 AV / Input / RDS
 TV Vol +	 Shift + Vol+
 TV Mute	 Shift + Mute / Dimmer
 TV CH +	 Shift + CH+ /
 TV Vol -	 Shift + Vol-
 TV CH -	 Shift + CH- /
 Audio	 Audio / Lang I/II
 SUB-T	 Subtitle / EQ
 TV / STB	 Shift + TV/Radio / Program
 TV / Radio	 TV/Radio /
 Mute	 Mute / Dimmer
 Text	 Text / Goto
 Sleep	 Sleep / Timer
 Voltar	 Setup / OPT /
 Guida TV	 Shift + Guide / EPG / -/-

Originale	Sostituto
 VOD	 Shift + Audio / Lang I/II
 Vol +	 Vol+
 Up	 Up
 CH +	 CH+ / Page+
 Vol -	 Vol-
 Left	 Left
 OK	 OK
 Right	 Right
 CH -	 CH- / Page-
 Down	 Down
 Menu	 Menu / Home
 Lista Gravacoes	 Smart / List
 Lista Gravacoes	 Shift + Smart / List
 Exit	 Exit / Cancel / Clear
 Rec	 Rec / Rec Mode
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold





Originale	Sostituto
<<	<< / Tune-
Play	Play / Slow
>>	>> / Tune+
Red / <	+ Shift + Red / Netflix /
Red / <	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow /	+ Shift + Yellow / YouTube /
Yellow /	Yellow / YouTube / Repeat
Blue / >	+ Shift + Blue / Prime
Blue / >	Blue / Prime Video / Random
1	1
2	2
3	3
4	4
5	5
6	6
7	7

Originale	Sostituto
8	8
9	9
*	Guide / EPG / -/--
0	0
# button"/> #	Fav / Marker / PC

