




 

 

 



 



 



 



 



 







 



 







 






 
 



 

 








Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Blue/Picture	 Blue
 Mute	 Mute	 O/I/I	 Dual
 1	 1	 Menu	 Menu
 2	 2	 Up	 Up
 3	 3	 Down	 Down
 4	 4	 Right	 Right
 5	 5	 Left	 Left
 6	 6	 OK	 Ok
 7	 7	 [≡]	 Text
 8	 8	 Back	 Back
 9	 9	 P+	 Ch +
 0	 0	 P-	 Ch -
 i	 Info	 Vol+	 Vol +
 AV	 AV	 Vol-	 Vol -
 Red/Zoom	 Red	 ^/[+]	 Format
 Green/(↔)	 Green	 Play/[?]	 Play
 Yellow/Timer	 Yellow	 >>/[♦]	 >>








 



 

 

 

 

 
 




 





 
 
 

 

 

 

 

 

 

 

 





 



 

 



 



 

 

 

 


Originale	Sostituto	Originale	Sostituto
	∨/Timer		Options
	Stop/[X]		Stop
	Pause/[≡i]		Pause
	[■]		Subt
	[←■]		TV/R
	[⇕■]		3D
	♪		Shift + Dual

Originale	Sostituto



 
 

 



 






 





Originale	Sostituto	Originale	Sostituto
 Power	 Power	 P-	 Ch -
 Mute	 Mute	 Vol+	 Vol +
 1	 1	 Vol-	 Vol -
 2	 2	 Red/Zoom	 Red
 3	 3	 Green/(↔)	 Green
 4	 4	 Yellow/Timer	 Yellow
 5	 5	 Blue/Picture	 Blue
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 0	 0		
 AV	 AV		
 i	 Info		
 O)/I/II	 Dual	 Rec/Top Menu	 Rec
 [≡]	 Text	 Play/[?]	 Play
 P+	 Ch +	 Stop/[X]	 Stop
		 Pause/[≡i]	 Pause
			 Subt
			 TV/R



 


 



 





 

















 







 



 











 



 



 






Originale		Sostituto		Originale		Sostituto	
	[↕■]		3D				
	♪		Shift + Dual				
	Menu		Menu				
	Back		Back				
	OK		Ok				
	Up		Up				
	Down		Down				
	Right		Right				
	Left		Left				






 

 

 

 
 
 

 




Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Green/(↔)	 Green
 Mute	 Mute	 Yellow/Timer	 Yellow
 1	 1	 Blue/Picture	 Blue
 2	 2	 OK	 Ok
 3	 3	 Up	 Up
 4	 4	 Down	 Down
 5	 5	 Right	 Right
 6	 6	 Left	 Left
 7	 7	 P+	 Ch +
 8	 8	 P-	 Ch -
 9	 9	 Vol+	 Vol +
 0	 0	 Vol-	 Vol -
 i	 DISPLAY INFO	 <<	 <<
 AV	 TIMER AV	 Play/[?]	 PLAY MODE Play
 O/I/II	 SOUND DUAL	 >>/[♦]	 >>
 Menu	 TOP MENU MENU	 Stop/[X]	 Stop
 Red/Zoom	 A	 Pause/[≡i]	 Pause





Originale	Sostituto	Originale	Sostituto
 ^/[+]	 Format		
 √/Timer	 Options		
 [■]	 Subt		
 [←■]	 TV/R		
 [↓■]	 3D		
 ♪	 Shift + Dual		
 Back	 Back		
 [≡]	 Text		

