




Originale	Sostituto
 Standby	 Power
 Subtitle	 Subtitle / EQ
 Audio	 Audio / Lang I / II
 Open/Close	 Eject / Surround
 Angle	 Info / Angle
 Title	 Sound / Title
 Vol+	 Vol+
 Prog	 TV / Radio /
 Menu	 Menu / Home
 Vol-	 Vol-
 Setup	 Setup / OPT /
 Up	 Up
 Play / Pause	 Play / Slow
 Play / Pause	 Pause / Step / Freeze
 Left	 Left
 Enter	 OK
 Right	 Right

Originale	Sostituto
 Mute	 Mute / Dimmer
 Down	 Down
 Stop	 Stop / Hold
 1	 1
 2	 2
 3	 3
 Goto	 Text / Goto
 4	 4
 5	 5
 6	 6
 Clear	 Exit / Cancel / Clear
 7	 7
 8	 8
 9	 9
 0	 0
 << Rev	 << / Tune-
 >> Fwd	 >> / Tune+





Originale	Sostituto	Originale	Sostituto
PREV I<< Prev	PRESET- I<< / Preset-		
NEXT >>I Next	PRESET+ >>I / Preset+		
P/N P/N	TOP MENU D.Menu / Top		
DISPLAY Display	MEDIA Display / Media		
ZOOM Zoom	SIZE Zoom / Size		
SLOW Slow	SHIFT + SLOW Shift + Play /		
USB USB	SHIFT + 8 Shift + 8		
USB USB	RDS AV / Input / RDS		
A-B A-B	REPEAT A-B Yellow / YouTube / Repeat		
REPEAT Repeat	APP Green / APP / Repeat		
V-MODE V.Mode	FORMAT Picture / Format		

Originale	Sostituto

