 





 

 

 

































 

 



 






















Originale	Sostituto
 Standby	 Power
 Eject	 Eject / Surround
 Source	 AV / Input / RDS
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Sleep	 Sleep / Timer
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0/10	 0

Originale	Sostituto
 Recall/+10	 Back / Return
 FAV/Program	 Fav / Marker / PC
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 Display	 Display / Media
 D.Setup	 Setup / OPT /
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Vol-	 Vol-
 Vol+	 Vol+
 CH-	 CH- / Page-
 CH+	 CH+ / Page+
 Red/Goto	 Red / Netflix / Search
 Green/A-B	 Green / APP / Repeat





	Originale	Sostituto	
	Yellow/Angle	 Yellow / YouTube / Repeat	
	Blue/Repeat	 Blue / Prime Video / Random	
	Play/Hold	 Play / Slow	
	Pause	 Pause / Step / Freeze	
	Stop/Reveal	 Stop / Hold	
	Size/Aspect	 Zoom / Size	
	Subtitle	 Subtitle / EQ	
	<<	 << / Tune-	
	Text	 Text / Goto	
	>>/Subpage	 >> / Tune+	
	SCR/Title	 Shift + Sound / Title	
	Slow/EPG	 Guide / EPG / -/--	
	I<</Index	 I<< / Preset-	
	>>I/Mix	 >>I / Preset+	
	D.Menu	 D.Menu / Top	
	I/II/Audio	 Audio / Lang I/II	
	Media	 Shift + Display / Media	

	Originale	Sostituto	
	Rec	 Rec / Rec Mode	
	Timeshift	 Shift + Sleep / Timer	
	Tv/Radio	 TV/Radio /	

