


 









 
 
 
 
 
 
 


 
 

 
 


 

 

 



 


 


 
 

 



 







 
 









 




 
 
 
 
 

 


 





 

 


 
 











Originale	Sostituto	Originale	Sostituto
 Power	 Power	 CH List	 List
 Source	 AV	 CH+	 Ch +
 1	 1	 CH-	 Ch -
 2	 2	 Settings	 Options
 3	 3	 Home	 Smart
 4	 4	 Guide	 Guide
 5	 5	 E-Manual	 D. Menu
 6	 6	 Info	 Info
 7	 7	 Return	 Back
 8	 8	 Exit	 Exit
 9	 9	 Up	 Up
 0	 0	 Down	 Down
 TTX/MIX	 Text	 Right	 Right
 PRE-CH	 Pre Ch	 Left	 Left
 Vol+	 Vol +	 Enter	 Ok
 Vol-	 Vol -	 Red	 Red
 Mute	 Mute	 Green	 Green

Originale	Sostituto	Originale	Sostituto
 CH List	 List	 CH+	 Ch +
 CH-	 Ch -	 Settings	 Options
 Home	 Smart	 Guide	 Guide
 E-Manual	 D. Menu	 Info	 Info
 Return	 Back	 Exit	 Exit
 Up	 Up	 Down	 Down
 Right	 Right	 Left	 Left
 Enter	 Ok	 Red	 Red
 Green	 Green		





Originale		Sostituto		Originale		Sostituto	
	Yellow		Yellow				
	Blue		Blue				
	Pic Size		3D				
	AD/Subt.		Subt				
	Picture		Format				
	<</ <<		<<				
	Stop		Stop				
	Play		Play				
	Pause		Pause				
	>>/>>		>>				

