







 

 



 





 





 












Originale	Sostituto
 On - Off	 Power
 1	 1
 2	 2
 3	 3
 Open - Close	 Eject / Surround
 4	 4
 5	 5
 6	 6
 Play Mode	 Shift + Play /
 7	 7
 8	 8
 9	 9
 Edit	 Text / Goto
 AV	 AV / Input / RDS
 0	 0
 TV / DVD	 TV/Radio /
 Setup	 Setup / OPT /

Originale	Sostituto
 Clear / Exit	 Exit / Cancel / Clear
 Menu	 Menu / Home
 Left	 Left
 Up	 Up
 OK	 OK
 Right	 Right
 Down	 Down
 Live	 Display / Media
 Naviclick	 Smart / List
 Info	 Info / Angle
 Advance	 D.Menu / Top
 PR + / >>I	 >>I / Preset+
 PR + / >>I	 Shift + >>I / Preset+
 Again - Return	 Back / Return
 PR - / I<<<	 Shift + I<<< / Preset-
 PR - / I<<<	 I<<< / Preset-
 <<< REV	 <<< / Tune-





Originale	Sostituto	Originale	Sostituto
 Play	 Play / Slow		
 >> FWD	 >> / Tune+		
 Rec	 Rec / Rec Mode		
 Stop	 Stop / Hold		
 Pause	 Pause / Step / Freeze		
 Audio	 Audio / Lang I/II		
 Angle	 Shift + Info / Angle		
 Zoom / Video Out	 Zoom / Size		
 Subtitle	 Subtitle / EQ		

Originale	Sostituto	Originale	Sostituto





Originale	Sostituto	Originale	Sostituto
Back	Back / Return	AV	AV / Input / RDS
Red/[o]	Red / Netflix / Search	0/-/--	Guide / EPG / -/--
Green/Timer/List	Green / APP / Repeat	0000	0
Yellow	Yellow / YouTube / Repeat	Exit	Exit / Cancel / Clear
Blue/[ ]	Blue / Prime Video / Random	Menu	Menu / Home
Text	Text / Goto	Left/Zoom-	Left
SP/LP	Setup / OPT /	Up	Up
Mark	Fav / Marker / PC	OK	OK
1	1	Right/Zoom+	Right
2	2	Down	Down
3	3	Info	Info / Angle
4	4	<<	<< / Tune-
5	5	Play	Play / Slow
6	6	>>	>> / Tune+
7	7	Rec	Rec / Rec Mode
8	8	Stop	Stop / Hold
9	9	Pause	Pause / Step / Freeze

Originale	Sostituto	Originale	Sostituto
AV	AV / Input / RDS	0/-/--	Guide / EPG / -/--
0000	0	Exit	Exit / Cancel / Clear
Menu	Menu / Home	Left/Zoom-	Left
Up	Up	OK	OK
Right/Zoom+	Right	Down	Down
Info	Info / Angle	<<	<< / Tune-
Play	Play / Slow	>>	>> / Tune+
Rec	Rec / Rec Mode	Stop	Stop / Hold
Pause	Pause / Step / Freeze		





	Originale	Sostituto	Originale	Sostituto
	Power			
	Vol+			
	PR+			
	Mute			
	Vol-			
	PR-			

