









 

 

 


 

 
 

 
 


 





Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Right	 Right
 Open/Close	 Eject	 Left	 Left
 Source	 AV	 Mute	 Mute
 Break	 Smart	 Vol+	 Vol +
 Play	 Play	 Vol-	 Vol -
 Stop	 Stop	 Treble+	 Ch +
 Pause	 Pause	 Treble-	 Ch -
 >>	 >>	 O))/Audio	 Dual
 <<	 <<	 [...] /Subtitle	 Subt
 >>	 >>	 Angle	 Yellow
 <<	 <<	 Visual Info	 Red
 Menu	 Menu	 Visual Adjust	 Green
 Return	 Back	 <	 Shift + Left
 Setup	 Options	 Color Mode	 Format
 Enter	 Ok	 >	 Shift + Right
 Up	 Up	 Image On/Off	 Text
 Down	 Down	 Top Menu	 Shift + Menu

Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Right	 Right
 Open/Close	 Eject	 Left	 Left
 Source	 AV	 Mute	 Mute
 Break	 Smart	 Vol+	 Vol +
 Play	 Play	 Vol-	 Vol -
 Stop	 Stop	 Treble+	 Ch +
 Pause	 Pause	 Treble-	 Ch -
 >>	 >>	 O))/Audio	 Dual
 <<	 <<	 [...] /Subtitle	 Subt
 >>	 >>	 Angle	 Yellow
 <<	 <<	 Visual Info	 Red
 Menu	 Menu	 Visual Adjust	 Green
 Return	 Back	 <	 Shift + Left
 Setup	 Options	 Color Mode	 Format
 Enter	 Ok	 >	 Shift + Right
 Up	 Up	 Image On/Off	 Text
 Down	 Down	 Top Menu	 Shift + Menu





	Originale	Sostituto		Sostituto
On Screen	On Screen	SEARCH TV/R	TV/R	TV/R
Sleep	Sleep	PROG SLEEP	Sleep	Sleep
Wide/Normal	Wide/Normal	ECO 3D	3D	3D
Dimmer	Dimmer	APP MEDIA	Media	Media
Sound Mode	Sound Mode	DISC NAV LIST	List	List
Progressive	Progressive	DISPLAY INFO	Info	Info
Playback	Playback	FAV PRE-CH	Pre Ch	Pre Ch
Repeat	Repeat	SHIFT + REPEAT TEXT	Shift + Text	Shift + Text
Play Mode	Play Mode	SHIFT + PLAY MODE	Shift + Play	Shift + Play
DVD Level	DVD Level	SHIFT + -/++ GUIDE	Shift + Guide	Shift + Guide
Cancel	Cancel	CLEAR EXIT	Exit	Exit
On Screen	1	1	1	1
Sleep	2	2	2	2
Wide/Normal	3	3	3	3
Dimmer	4	4	4	4
Repeat	5	5	5	5
Sound Mode	6	6	6	6

	Originale	Sostituto		Sostituto
Cancel	7	7	7	7
Play Mode	8	8	8	8
Progressive	9	9	9	9
Playback	0	0	0	0
DVD Level	+10	-/++ GUIDE	Guide	Guide

