 





 

 

 





 

 



 





 

 

 





Originale	Sostituto
 Mute	 Mute / Dimmer
 Power	 Power
 1	 1
 2	 2
 3	 3
 Sleep	 Sleep / Timer
 4	 4
 5	 5
 6	 6
 Still	 Eject / Surround
 7	 7
 8	 8
 9	 9
 Aspect	 Zoom / Size
 -/--	 Guide / EPG / -/--
 0	 0
 Prev. Ch.	 Back / Return

Originale	Sostituto
 Source	 AV / Input / RDS
 Vol -	 Vol-
 Vol +	 Vol+
 CH -	 CH- / Page-
 CH +	 CH+ / Page+
 Info	 Info / Angle
 Nicam/A2 / Audio	 Audio / Lang I/II
 Auto	 Setup / OPT /
 P.Mode	 Picture / Format
 Up	 Up
 Menu	 Menu / Home
 Left	 Left
 OK	 OK
 Right	 Right
 S.Mode	 Sound / Title
 Down	 Down
 Exit	 Exit / Cancel / Clear



