


 







 

 











Originale		Sostituto		Originale		Sostituto	
	Power		Power		9		9
	Menu		Menu		Vol+		Vol +
	Title		TV/R		Vol-		Vol -
	Home		Smart		Audio		Dual
	Zoom		Eject		Subtitle		Subt
	Rotate		Pre Ch		Angle		Red
	Thumbnails		Media		Up		Up
	Subtitle ♦		Options		Down		Down
	0		0		Right		Right
	1		1		Left		Left
	2		2		Play Enter		Ok
	3		3		Play All		Play
	4		4		Shuffle		Yellow
	5		5		Info		Info
	6		6		Back		Back
	7		7		I<<		I<<
	8		8		Pause/Step		Pause





	Originale	Sostituto
	>>I	 >>I
	<<	 <<
	Stop	 Stop
	>>	 >>
	Slow	 Green
	Mute	 Mute
	Repeat	 Text
	Repeat A-B	 3D
	Search	 +  Shift + TV/R
	Video Output	 AV

Originale	Sostituto

