





 

 



 

 

 


 

 

 













Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 Text / Play/Pause	 Play / Slow
 Text / Play/Pause	 Pause / Step / Freeze
 Text / Play/Pause	 Text / Goto
 Still / Stop	 Stop / Hold
 Radio	 TV/Radio /
 Aspect / Size	 Zoom / Size
 Red / <<	 << / Tune-
 Red / <<	 Red / Netflix / Search
 Green / >>	 Green / APP / Repeat
 Green / >>	 >> / Tune+
 Yellow / I<<	 Yellow / YouTube / Repeat
 Yellow / I<<	 I<< / Preset-
 Blue / >>I	 >>I / Preset+
 Blue / >>I	 Blue / Prime Video / Random
 Source	 AV / Input / RDS

Originale	Sostituto
 Menu	 Menu / Home
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 Info	 Info / Angle
 Exit	 Exit / Cancel / Clear
 Vol +	 Vol+
 Index	 Display / Media
 CH +	 CH+ / Page+
 Vol -	 Vol-
 List	 Smart / List
 CH -	 CH- / Page-
 1	 1
 2	 2
 3	 3





Originale		Sostituto	
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Audio / I/II		Audio / Lang I/II
	0		0
	DVB		D.Menu / Top
	FAV		Fav / Marker / PC
	Sleep		Sleep / Timer
	EPG		Guide / EPG / -->
	Prev. CH.		Back / Return
	Cancel		Shift + Exit / Cancel / Clear
	Subtitle		Subtitle / EQ
	USB		Shift + 8
	Rec		Rec / Rec Mode

Originale		Sostituto	

