







 



 
 


 
 

 
 



 



 



 



 


 
 


 
 
 


 
 


 
 


 
 


 



 







Originale		Sostituto		Originale		Sostituto	
	Power		Power		Blue / Title		Blue
	HDMI Control		Smart		1		1
	Rec		Rec		2		2
	Play		Play		3		3
	Pause		Pause		4		4
	Stop		Stop		5		5
	I<<		I<<		6		6
	<<		<<		7		7
	>>		>>		8		8
	>>I		>>I		9		9
	Screen		Format		0		0
	Lang		Dual		Text		Text
	Subtitle		Subt		Swap		Pre Ch
	PIP / World		3D		Up		Up
	Red / Zoom		Red		Right		Right
	Green / Repeat		Green		Down		Down
	Yellow / Root		Yellow		Left		Left





Originale		Sostituto	
OK	OK	OK	Ok
P/CH +	P/CH +	CH +	Ch +
P/CH -	P/CH -	CH -	Ch -
Mute	Mute	MUTE	Mute
Vol +	Vol +	VOL +	Vol +
Vol -	Vol -	VOL -	Vol -
Menu	Menu	TOP MENU MENU	Menu
Source	Source	TIMER AV	AV
Return	Return	RETURN BACK	Back
EPG	EPG	- / - GUIDE	Guide
Info	Info	DISPLAY INFO	Info
Sleep	Sleep	PROG SLEEP	Sleep
FAV	FAV	SHIFT + FAV PRE-CH	Shift + Pre Ch
Angle / Media	Angle / Media	APP MEDIA	Media
Search Mode	Search Mode	SEARCH TV/R	TV/R
Display	Display	SHIFT + DISPLAY INFO	Shift + Info
Presets	Presets	DISC NAV LIST	List

Originale	Sostituto

