 




 
 
 
 
 

 

 







| Originale | Sostituto |
|---|--|
|  Power |  Power |
|  Mute |  Mute |
|  Eject / Nicam |  Eject |
|  Recall / Goto |  Pre Ch |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  TV Menu |  Menu |
|  Source |  AV |
|  Up |  Up |

| Originale | Sostituto |
|---|--|
|  Right |  Right |
|  Down |  Down |
|  Left |  Left |
|  Enter |  Ok |
|  DVD/DVB Menu |  D. Menu |
|  Exit |  Exit |
|  Vol + |  Vol + |
|  Vol - |  Vol - |
|  Sound |  Shift + Dual |
|  PIC |  Shift + Format |
|  CH + |  Ch + |
|  CH - |  Ch - |
|  Sleep |  Sleep |
|  Aspect |  Format |
|  Rad / DVD |  Options |
|  Recall / TV |  Back |
|  Text |  Text |





| Originale | Sostituto |
|-------------------|-------------------|
| Play/Pause / Info | Info |
| Play/Pause / Info | Play |
| Play/Pause / Info | Pause |
| Stop / FAV | + Shift + Pre Ch |
| Stop / FAV | Stop |
| EPG | Guide |
| Red / DVD/USB | Red |
| Green / Title | Green |
| Yellow / PBC | Yellow |
| Blue / Angle | Blue |
| << / Reveal | << |
| >> / Hold | >> |
| I<< / List | I<< |
| >>I / Index | >>I |
| Subpage | Media |
| Display | + Shift + Info |
| Audio | Dual |

| Originale | Sostituto |
|-----------|-----------|
| Subtitle | Subt |

