



Originale	Sostituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 ? / Audio	 Audio / Lang I/II
 0	 0
 Aspect / Subtitle	 Zoom / Size
 Aspect / Subtitle	 Subtitle / EQ
 PIP / Recall	 Fav / Marker / PC
 AV	 AV / Input / RDS
 Mute	 Mute / Dimmer

Originale	Sostituto
 i	 Info / Angle
 Up / P+	 Up
 Up / P+	 CH+ / Page+
 Z / Return	 Back / Return
 Left / Vol -	 Left
 Left / Vol -	 Vol-
 OK	 OK
 Right / Vol +	 Right
 Right / Vol +	 Vol+
 TXT / Menu	 Menu / Home
 TXT / Menu	 Text / Goto
 Down / P-	 Down
 Down / P-	 CH- / Page-
 TV-G / Top	 D.Menu / Top
 Red / Rec	 Rec / Rec Mode
 Red / Rec	 Red / Netflix / Search
 Green / Play	 Play / Slow





Originale

Sostituto

	Green / Play		Green / APP / Repeat
	Yellow / Pause		Yellow / YouTube / Repeat
	Yellow / Pause		Pause / Step / Freeze
	Blue / Stop		Blue / Prime Video / Random
	Blue / Stop		Stop / Hold
	Scan / I<		I<< / Preset-
	PAT / >I		>>I / Preset+
	S / <<		<< / Tune-
	P / >>		>> / Tune+

Originale

Sostituto

