









 





Originale	Sostituto
 Standby	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Vol+	 Vol+
 Vol-	 Vol-
 Left	 Left
 Right	 Right
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+

Originale	Sostituto
 Stop	 Stop / Hold
 Play/Pause	 Play / Slow
 Play/Pause	 Pause / Step / Freeze
 I>/Resume	 Shift + Play /
 Surround	 Eject / Surround
 Sound	 Sound / Title
 Night	 Shift + Sleep / Timer
 Mute	 Mute / Dimmer
 Repeat	 Green / APP / Repeat
 Repeat A-B	 Yellow / YouTube / Repeat
 Sleep	 Sleep / Timer
 DIM	 Shift + Mute / Dimmer
 Subw +	 Up
 Rear +	 Shift + CH+ /
 Center +	 CH+ / Page+
 Tv Vol+	 Shift + Vol+
 Subw -	 Down





Originale	Sostituto	Originale	Sostituto
Standby	Power	Stop	Stop / Hold
1	1	Play/Pause	Play / Slow
2	2	I>/Resume	Shift + Play /
3	3		
4	4		
5	5		
6	6		
7	7		
8	8		
9	9		
Disc (DVD)	D.Menu / Top		
0	0		
Vol+	Vol+		
System (DVD)	Menu / Home		
Vol-	Vol-		
I<<	I<< / Preset-		
>>I	>>I / Preset+		

Originale	Sostituto	Originale	Sostituto
Stop	Stop / Hold	Play/Pause	Play / Slow
I>/Resume	Shift + Play /		





Originale	Sostituto	Originale	Sostituto
 Standby	 Power		
 1	 1		
 2	 2		
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 0	 0		
 Up	 Up		
 Left	 Left		
 OK	 OK		
 Right	 Right		
 Down	 Down		

Originale	Sostituto





Originale		Sostituto		Originale		Sostituto	
	Standby		Power				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				

