




 




 
 

 





 
 
 


















 
 


 
 
 
 

 

 

 









 








Originale	Sostituto
 Power	 Power
 Source	 AV
 HDMI	 D. Menu
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 TTX/MIX	 Text
 PRE-CH	 Pre Ch
 Vol+	 Vol +
 Vol-	 Vol -

Originale	Sostituto
 Mute	 Mute
 P+	 Ch +
 P-	 Ch -
 CH List	 List
 Menu	 Menu
 Guide	 Guide
 Smart Hub	 Smart
 Tools	 Options
 Info	 Info
 Back/Return	 Back
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Red	 Red





Originale		Sostituto		Originale		Sostituto	
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	Family Story		Media				
	Search		TV/R				
	P.Size		Format				
	Support		Eject				
	D		3D				
	AD/Subt.		Subt				
	<<		<<				
	I<<		I<<				
	Pause		Pause				
	>>		>>				
	>>I		>>I				
	Rec		Rec				
	Play		Play				
	Stop		Stop				

