

 





 

 







 
 

 








 







 

 

 



Originale	Sostituto
 Power	 Power
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 <<	 << / Tune-
 Play	 Play / Slow
 >>	 >> / Tune+
 Source	 AV / Input / RDS
 TV	 TV/Radio /
 Format	 Picture / Format
 Home	 Menu / Home
 List	 Smart / List
 Info	 Info / Angle
 Adjust	 D.Menu / Top
 Options	 Setup / OPT /
 Up	 Up
 Down	 Down
 Right	 Right

Originale	Sostituto
 Left	 Left
 OK	 OK
 Back	 Back / Return
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 Vol+	 Vol+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5





	Originale	Sostituto
	6	 6
	7	 7
	8	 8
	9	 9
	0	 0
	Subtitle	 Subtitle / EQ
	Text	 Text / Goto

	Originale	Sostituto

