


 







Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 DTV	 Shift + 1
 Radio	 TV/Radio /
 USB	 Shift + 8
 DVD	 Shift + 2
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 TV Guide	 Guide / EPG / -/--
 0	 0

Originale	Sostituto
 Recall	 Back / Return
 Vol +	 Vol+
 P.Mode	 Picture / Format
 CH +	 CH+ / Page+
 Vol -	 Vol-
 S.Mode	 Sound / Title
 CH -	 CH- / Page-
 FAV	 Fav / Marker / PC
 Menu	 Menu / Home
 Up	 Up
 Exit	 Exit / Cancel / Clear
 Left	 Left
 OK	 OK
 Right	 Right
 Source	 AV / Input / RDS
 Down	 Down
 Info	 Info / Angle



