 

 

 


 

 

 

 


 

 




 


 


 

 

 

 

 
 






 



 


 
 





 



 



 

 

 

 

 

 

 

 





Originale		Sostituto		Originale		Sostituto	
	Power		Power		9		9
	Input		AV / Input / RDS		P+		CH+ / Page+
	TV/DVD		TV/Radio /		[i+]		Info / Angle
	DTV/ATV		Smart / List		0		0
	EPG		Guide / EPG / -/--		Recall		Fav / Marker / PC
	[<>]		Picture / Format		P-		CH- / Page-
	Mute		Mute / Dimmer		Red/Left Skip		Red / Netflix / Search
	1		1		Green/Left Rev		Green / APP / Repeat
	2		2		Yellow/Right FWD		Yellow / YouTube / Repeat
	3		3		Blue/Right Skip		Blue / Prime Video / Random
	Vol+		Vol+		Pause		Pause / Step / Freeze
	4		4		Play		Play / Slow
	5		5		Stop		Stop / Hold
	6		6		Setup/Tv Menu		Setup / OPT /
	Vol-		Vol-		DVD Menu		Menu / Home
	7		7		Up		Up
	8		8		Left/Left Slow		Left





Originale	Sostituto
 OK	 OK
 Right/I> Slow	 Right
 Return	 Back / Return
 Down	 Down
 Top Menu	 D.Menu / Top
 Cancel	 Exit / Cancel / Clear
 [...]	 Subtitle / EQ
 [≡◆]/Audio	 Audio / Lang I/II
 Play Mode	 Display / Media
 [≡≡]/Text	 Text / Goto
 [≡?]/Angle	 Shift + Info / Angle
 [≡o]/Zoom	 Zoom / Size
 [≡+]	 Sleep / Timer

Originale	Sostituto

