 








 

 



Originale	Sostituto
 Source	 AV / Input / RDS
 Sleep	 Sleep / Timer
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Options	 Setup / OPT /
 0	 0
 Screens	 Display / Media
 Vol +	 Vol+
 Favourites	 Fav / Marker / PC

Originale	Sostituto
 P +	 CH+ / Page+
 Vol -	 Vol-
 Mute	 Mute / Dimmer
 P -	 CH- / Page-
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 TTX	 Text / Goto
 Pause	 Pause / Step / Freeze





	Originale	Sostituto	Originale	Sostituto
	V-Format	 Picture / Format		
	EPG	 Guide / EPG / -/-		
	i	 Info / Angle		
	Timer	 +  Shift + Sleep / Timer		
	I / II	 Audio / Lang I/II		
	SUB-T	 Subtitle / EQ		

