



Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 Picture	 Picture / Format
 Sound	 Sound / Title
 Zoom	 Zoom / Size
 Subtitle	 Subtitle / EQ
 EPG	 Guide / EPG / -/--
 FAV	 Fav / Marker / PC
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9

Originale	Sostituto
 CHN List	 Smart / List
 0	 0
 Return / Back	 Back / Return
 Menu	 Menu / Home
 Up	 Up
 Source	 AV / Input / RDS
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 Exit	 Exit / Cancel / Clear
 TV / Radio	 TV/Radio /
 Vol +	 Vol+
 Home	 D.Menu / Top
 PR +	 CH+ / Page+
 Vol -	 Vol-
 PR -	 CH- / Page-





 

 




**Originale**
**Sostituto**

	Rec		Rec / Rec Mode
	Sleep		Sleep / Timer
	Info		Info / Angle
	Play/Pause / Index		Play / Slow
	Play/Pause / Index		Pause / Step / Freeze
	<< / Reveal		<< / Tune-
	>> / Mix		>> / Tune+
	Stop / Cancel		Stop / Hold
	I<< / Size		I<< / Preset-
	>>I / Sub-Page		>>I / Preset+
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	I/II / Nicam		Audio / Lang I/II
	Text		Text / Goto
	Freeze / Hold		Shift + Stop / Hold

Hold

**Originale**
**Sostituto**

	PVR List		Display / Media
	Quick		Setup / OPT /
	AD		Eject / Surround
	3D		Shift + 3

