


 
 
 




 
 
 

 



 

 


 

 








Originale	Sostituto
 Power	 Power
 Mute	 Mute
 Source	 AV
 P.Mode	 Shift + Format
 S.Mode	 Shift + Dual
 I/II Audio	 Dual
 Sleep	 Sleep
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Originale	Sostituto
 List	 List
 Recall	 Back
 TV Menu	 Menu
 Exit	 Exit
 Text	 Text
 Info / Display	 Info
 Up	 Up
 Right	 Right
 Down	 Down
 Left	 Left
 OK / Enter	 Ok
 V -	 Vol -
 V +	 Vol +
 P -	 Ch -
 P +	 Ch +
 Red	 Red
 Green	 Green





Originale		Sostituto		Originale	Sostituto
	Yellow		Yellow		
	Blue		Blue		
	Subtitle		Subt		
	Hold		Pause		
	Size		Format		
	Reveal		Options		
	Mix		Shift + Text		
	Zoom / Index		Eject		
	FAV		Pre Ch		
	Subpage		Shift + Subt		
	TV / Radio		TV/R		
	EPG		Guide		

