

 



 







Originale	Sostituto
 Power	 Power
 Open / Close	 Eject
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 10+	 Guide
 EQ	 Smart
 Mute	 Mute
 Prog	 Sleep
 Random	 D. Menu

Originale	Sostituto
 Repeat	 Text
 Up / CH +	 Up
 Up / CH +	 Ch +
 Down / CH -	 Down
 Down / CH -	 Ch -
 Right / Seek +	 Right
 Left / Seek -	 Left
 Play / Pause	 Ok
 Play / Pause	 Play
 Play / Pause	 Pause
 <<	 <<
 >>	 >>
 Stop	 Stop
 I<<	 I<<
 >>I	 >>I
 Source	 AV
 CD / USB	 Media



