




Originale	Sostituto
Open / Close	Eject / Surround
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
Audio	Audio / Lang I/II
0	0
Display	Display / Media
Repeat	Green / APP / Repeat
Zoom	Zoom / Size
Top Menu	D.Menu / Top

Originale	Sostituto
Top Menu	Menu / Home
Up	Up
Menu List	Smart / List
Left	Left
Enter	OK
Right	Right
Clear	Exit / Cancel / Clear
Down	Down
Return	Back / Return
I<< Skip	I<< / Preset-
<< Rev	<< / Tune-
Fwd >>	>> / Tune+
Skip >>I	>>I / Preset+
Pause	Pause / Step / Freeze
Play	Play / Slow
Stop	Stop / Hold
T-Set	Shift + Setup / OPT / Tools







Originale	Sostituto
 Open / Close	 Eject / Surround
 Power	 Power
 1	 1
 2	 2
 3	 3
 Prog +	 CH+ / Page+
 4	 4
 5	 5
 6	 6
 Prog -	 CH- / Page-
 7	 7
 8	 8
 9	 9
 Audio	 Audio / Lang I/II
 0	 0
 Display	 Display / Media
 Clear	 Exit / Cancel / Clear

Originale	Sostituto
 <<	 << / Tune-
 >>	 >> / Tune+
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 Stop	 Stop / Hold
 VCR	 Shift + 4
 DVD	 Shift + 2
 Rec Mode	 Rec / Rec Mode
 VCR Rec	 Shift + Rec / Rec Mode
 Slow	 Shift + Play /
 Search	 Red / Netflix / Search
 System	 Setup / OPT /

