
 
 


 

 

 


 





 





 
 

 

 


 
 

 

 



 


Originale	Sostituto	Originale	Sostituto
On/Off	 Power	OK Enter	 Ok
Mute	 Mute	Menu Right	 Right
Update	 Smart	Menu Off	 Exit
Reveal	 Media	Menu Down	 Down
Subt.List	 Subt	Back	 Back
Sleep Timer	 Sleep	Volume+	 Vol +
Txt Stop	 Stop	Chan.Up	 Ch +
Return TV	 TV/R	Volume-	 Vol -
Info	 +  Shift + Info	Menu audio	 Dual
Menu video	 D. Menu	Chan.Down	 Ch -
Text	 Text	1	 1
Txt Expand	 Eject	2	 2
TV/AV	 AV	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Display	 Info	6	 6
Menu Left	 Left	7	 7



Originale	Sostituto	Originale	Sostituto
8	 8	Still	 +  Shift + 4
9	 9	Dim Pip	 +  Shift + 5
Guide -/-- 1.	 GUIDE	Surround	 +  Shift + Red
0/10	 0	Nicam/Mono	 +  Shift + Green
2.Fav P/C 2.	 PRE-CH	Level L	 +  Shift + Yellow
Red	 A	Level R/Woofer	 +  Shift + Blue
Game Coo	 LIST		
Green	 B		
Yellow	 C		
Blue	 D		
Audio-	 <<		
Audio+	 >>		
Tone-	 <<<		
AV 2	 +  Shift + AV		
On Pip	 +  Shift + 1		
Swap	 +  Shift + 2		
Rotate Pip	 +  Shift + 3		

