 









 

 



























 











 



















Originale		Sostituto		Originale		Sostituto	
	Standby		Power		TV / Radio		TV/Radio /
	Mute		Mute / Dimmer		Menu		Menu / Home
	1		1		Up		Up
	2		2		Exit		Exit / Cancel / Clear
	3		3		Left		Left
	EPG		Guide / EPG / -/--		OK		OK
	4		4		Right		Right
	5		5		Record		Rec / Rec Mode
	6		6		Down		Down
	Audio		Audio / Lang I/II		Stop		Stop / Hold
	7		7		Vol +		Vol+
	8		8		CH +		CH+ / Page+
	9		9		Vol -		Vol-
	Subtitle		Subtitle / EQ		TTX		Text / Goto
	Info		Info / Angle		FAV		Fav / Marker / PC
	0		0		CH -		CH- / Page-
	Recall		Back / Return		Media		Display / Media



