 








 

 

























 





 




 


















Originale	Sostituto	Originale	Sostituto
 Standby	 Power	 TV / Radio	 TV/Radio /
 Mute	 Mute / Dimmer	 Menu	 Menu / Home
 1	 1	 Up	 Up
 2	 2	 Exit	 Exit / Cancel / Clear
 3	 3	 Left	 Left
 EPG	 Guide / EPG / -/--	 OK	 OK
 4	 4	 Right	 Right
 5	 5	 Record	 Rec / Rec Mode
 6	 6	 Down	 Down
 Audio	 Audio / Lang I/II	 Stop	 Stop / Hold
 7	 7	 Vol +	 Vol+
 8	 8	 CH +	 CH+ / Page+
 9	 9	 Vol -	 Vol-
 Subtitle	 Subtitle / EQ	 TTX	 Text / Goto
 Info	 Info / Angle	 FAV	 Fav / Marker / PC
 0	 0	 CH -	 CH- / Page-
 Recall	 Back / Return	 Media	 Display / Media

Originale	Sostituto	Originale	Sostituto
 TV / Radio	 TV/Radio /	 Menu	 Menu / Home
 Up	 Up	 Exit	 Exit / Cancel / Clear
 Left	 Left	 OK	 OK
 Right	 Right	 Record	 Rec / Rec Mode
 Down	 Down	 Stop	 Stop / Hold
 Vol +	 Vol+	 CH +	 CH+ / Page+
 Vol -	 Vol-	 TTX	 Text / Goto
 FAV	 Fav / Marker / PC	 CH -	 CH- / Page-
 Media	 Display / Media		





Originale	Sostituto	Originale	Sostituto
	I<< Prev		I<< / Preset-
	Play		Play / Slow
	<< Rew		<< / Tune-
	USB	+	Shift + 8
	Next>>I		>>I / Preset+
	Pause		Pause / Step / Freeze
	Fwd >>		>> / Tune+
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

Originale	Sostituto

