 









 

 



























 











 




















Originale		Sostituto		Originale		Sostituto	
	Standby		Power		TV / Radio		TV/Radio /
	Mute		Mute / Dimmer		Menu		Menu / Home
	1		1		Up		Up
	2		2		Exit		Exit / Cancel / Clear
	3		3		Left		Left
	EPG		Guide / EPG / -/--		OK		OK
	4		4		Right		Right
	5		5		Record		Rec / Rec Mode
	6		6		Down		Down
	Audio		Audio / Lang I/II		Stop		Stop / Hold
	7		7		Vol +		Vol+
	8		8		CH +		CH+ / Page+
	9		9		Vol -		Vol-
	Subtitle		Subtitle / EQ		TTX		Text / Goto
	Info		Info / Angle		FAV		Fav / Marker / PC
	0		0		CH -		CH- / Page-
	Recall		Back / Return		Media		Display / Media





	Originale	Sostituto
	I<< Prev	 I<< / Preset-
	Play	 Play / Slow
	<< Rew	 << / Tune-
	USB	 +  Shift + 8
	Next>>I	 >>I / Preset+
	Pause	 Pause / Step / Freeze
	Fwd >>	 >> / Tune+
	Red	 Red / Netflix / Search
	Green	 Green / APP / Repeat
	Yellow	 Yellow / YouTube / Repeat
	Blue	 Blue / Prime Video / Random

Originale	Sostituto

