



| Originale | Sostituto |
|--|--|
|  Power |  Power |
|  Mute |  Mute / Dimmer |
|  Audio |  Audio / Lang I/II |
|  TV / STB |  AV / Input / RDS |
|  TV / R |  TV/Radio / |
|  Sleep |  Sleep / Timer |
|  SUB |  Subtitle / EQ |
|  TXT |  Text / Goto |
|  Multi |  Display / Media |
|  P / N |  Picture / Format |
|  Recall |  Back / Return |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
| 5 | 5 |
| 6 | 6 |

| Originale | Sostituto |
|---|---|
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  SAT |  Shift + 0 |
|  EPG |  Guide / EPG / -/- |
|  Fav |  Fav / Marker / PC |
|  PGUP |  CH+ / Page+ |
|  PGDN |  CH- / Page- |
|  Up |  Up |
|  Right |  Right |
|  FAV + |  Vol+ |
|  FAV - |  Vol- |
|  Down |  Down |
|  Left |  Left |
| OK | OK |
| MENU | Menu / Home |





| Originale | Sostituto |
|---|--|
|  Exit |  Exit / Cancel / Clear |
|  Red |  Red / Netflix / Search |
|  Green |  Green / APP / Repeat |
|  Yellow |  Yellow / YouTube / Repeat |
|  Blue |  Blue / Prime Video / Random |
|  Pause |  Pause / Step / Freeze |
|  Zoom |  Zoom / Size |
|  Edit |  D.Menu / Top |
|  Info |  Info / Angle |
|  USB |  Shift + 8 |
|  A - B |  Shift + Yellow / YouTube / |
|  Goto |  Shift + Text / |
|  OGG |  Shift + 1 |
|  JPEG |  Shift + 2 |
|  PIP |  Eject / Surround |
|  Stop |  Stop / Hold |
|  Rec |  Rec / Rec Mode |

| Originale | Sostituto |
|--|---|
|  T.S. |  Sound / Title |
|  << |  << / Tune- |
|  >> |  >> / Tune+ |
|  PVR List |  Smart / List |
|  Play / Pause |  Play / Slow |
|  I<< |  I<< / Preset- |
|  >I< |  Setup / OPT / |
|  >>I |  >>I / Preset+ |

