

 
 


 




 
 



 




 



 



 


 
 



 
 






 
 
 

 

 

 



 














Originale		Sostituto		Originale		Sostituto	
	Standby		Power		>>		>>
	Record		Rec		Stop		Stop
	SV/V+		AV		Play		Play
	Timer		Shift + AV		Up / P +		Up
	Timer		Sleep		Up / P +		Ch +
	Clear		Exit		Down / P -		Down
	1		1		Down / P -		Ch -
	2		2		Right / Vol +		Right
	3		3		Right / Vol +		Vol +
	4		4		Left / Vol -		Left
	5		5		Left / Vol -		Vol -
	6		6		Mute		Mute
	7		7		Menu		Menu
	8		8		OK		Ok
	9		9		>I / Index		Info
	0		0		>I / Index		>>I
	<<		<<		[X]		Back





Originale		Sostituto		Originale		Sostituto	
	Still		Pause				
	Text		Text				
	Hold		Options				
	Size		Eject				

