



Originale	Sostituto
P100	Guide / EPG / -/--
Power	Power
REV	Sleep / Timer
DOUB	Smart / List
1	1
2	2
3	3
Hold	Stop / Hold
4	4
5	5
6	6
SUB	Subtitle / EQ
Update	Display / Media
7	7
8	8
9	9
MIX	D.Menu / Top

Originale	Sostituto
AV	AV / Input / RDS
0	0
TV	TV/Radio /
P+	Up
P+	CH+ / Page+
Mute	Mute / Dimmer
TV/TXT	Text / Goto
Menu	Menu / Home
Vol-	Vol-
Vol-	Left
OK	OK
Vol+	Vol+
Vol+	Right
SWAP	Back / Return
P-	CH- / Page-
P-	Down
16:9	Picture / Format





Originale	Sostituto	Originale	Sostituto
	Red  Red / Netflix / Search		
	Green  Green / APP / Repeat		
	Yellow  Yellow / YouTube / Repeat		
	Blue  Blue / Prime Video / Random		
	Violet/Info  Info / Angle		
	 Zoom / Size		
	PC  Fav / Marker / PC		
	PT  Setup / OPT /		

Originale	Sostituto

